

Supplied Hardware: (8) 1/4-20 x 3/4 Allen head bolts,
(8) UHMW mount blocks, (2) 1/4-20 set screws,
(2) GUARDRAIL end caps

BEDSLIDE
GET TO IT.






**GUARDRAIL
ASSEMBLY**

Tools Needed: Allen head wrench

STEP 1.

MOUNT SIDE TOWERS

Slide (2) MOUNT BLOCKS through the open end of the BEDTRAX on each side. Then secure each SIDE TOWER the MOUNT BLOCKS using the supplied 1/4-20 allen head bolts. Use (2) bolts per side. **DO NOT TIGHTEN!!** *PLEASE NOTE: BEDSLIDE® recommends a D-ring tie down be mounted in front of and behind each of the SIDE TOWERS. Position the D-ring tie downs in the desired locations prior to securing the side towers.

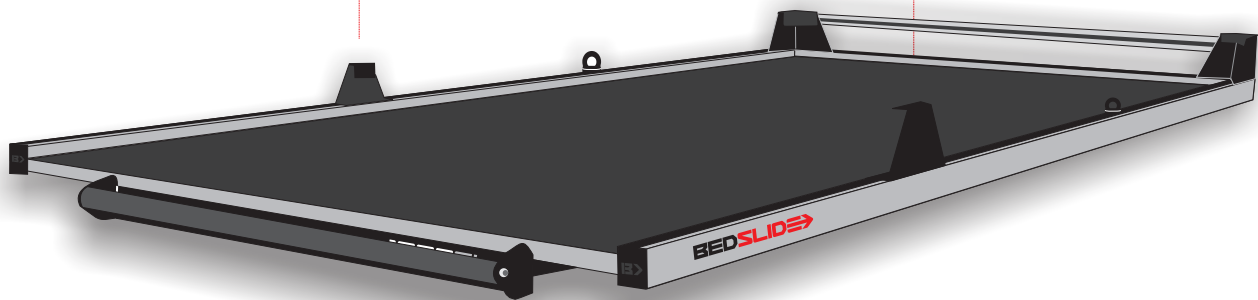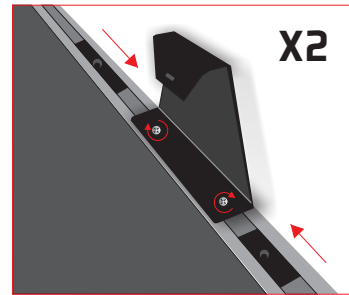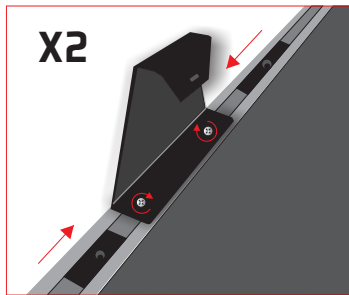

STEP 2.

INSTALL GUARDRAILS

Insert one end of each GUARDRAIL (slot facing inside) into each of the CORNER TOWERS. Insert a MOUNT BLOCK through the opposite end (tailgate end of BEDSLIDE) of the GUARDRAIL, slide to each corner and secure GUARDRAIL to the MOUNT BLOCK using supplied 1/4-20 allen head bolt. Next insert SIDE TOWERS on to the GUARDRAILS, slide a MOUNT BLOCK through the slot in the GUARDRAIL and fasten with supplied 1/4-20 allen head bolt. ***PLEASE NOTE: 6" OF THE GUARD RAIL SHOULD BE STICKING OUT PAST THE SIDE TOWER FOR A CLEAN LOOK.**

THAT'S IT! YOUR BEDSLIDE® IS FULLY ASSEMBLED!

